

# T3 Single Driver In-Ear Monitor

## Product Strapline

A lightweight and discreet canal-moulded monitor with sound beyond its size

## Short Description

The latest revision of the T3 has one of the smallest but most dynamically powerful and accurate drivers ever developed, enabling this small and lightweight monitor to deliver an enormous range with stunning clarity. For anyone requiring a diminutive and discreet in-ear monitor the T3 provides the perfect solution with a lightweight and comfortable canal-mould housing a single tiny driver. Manufactured from soft silicone, the T3 offers comfort and isolation like no other canal-moulded monitor with up to 27dB of outside noise eliminated and a flexible shell that moves with the shape of your ear canal so you get a perfect fit all the time.

SRP £249

Part Code ACST3

Rev. Date 03/10

## Full Description

### A decade of heritage

The T3 is our original in-ear monitor built with a single lightweight driver in a canal-mould shell delivering the full dynamic range of sound from a clean, simple and discreet package weighing in at only 13 grams. First manufactured in 1999, the T3 has been delighting audiophiles and performing musicians alike for more than a decade giving people the freedom to enjoy sound just as they want to hear it without interference from outside noise. The T3's latest incarnation offers up the most dynamic and accurate driver in its history that gives you reference quality sound from a tiny package that keeps the T3 as discreet and lightweight as possible without compromising on the substantial soundstage that monitor users demand.

### Creating clarity

The isolation provided by a custom-fit earpiece brings not only safety benefits but allows lower listening volumes, even in noisy environments, which means you get better sound and a much more comfortable listening experience. The T3 is manufactured from soft medical grade silicone which warms to body temperature in just a few minutes creating a snug, airtight fit that makes them far less noticeable to the wearer. Because the earpieces are flexible they are able to maintain a perfect seal at all times, even during vocal performances when the shape of the ear canal changes with the movement of the jaw.

### Continuous innovation

Over the course of the last ten years no aspect of the T3 has stood still. The ACS spirit of innovation has meant that the T3 has been tweaked and improved every year of its life to give us the product that many people still swear by today. Improvements to the silicone, the build method, the driver and the cabling have kept the T3 at the forefront of cost-effective in-ear monitoring and this innovation continues today. Making sure that we use the right cable to deliver your sound is as important as every other aspect in the design of our monitors so we make sure they are just as well thought out. Starting with the best conductive core we then add Kevlar threads for strength and flexibility so that we can be sure you'll get the performance you demand. Each cable is sheathed with a special finish that reduces the transmission of friction noise to the earpieces so there's as little interference as possible. The cable is then clamped at the Y divide with a custom pressed lengthened binder to give it extra strength where you need it most. Finally, each cable is finished with our custom-moulded right-angled plug offering high levels of resilience as well as quality with a gold-plated 3.5mm connector and iPhone compatible shoulder design.

### A personal finish

It's the finishing touches that make every one of our hand-made monitors completely unique from a choice of cable colours to a selection of bespoke silicone finishes. Every monitor can be laser etched with lettering of your choice.

# T3 Single Driver In-Ear Monitor

## Technical Specification

Frequency Response	16Hz ~ 20kHz
Impedance	10 Ohms
Isolation	27 dB
1KHz Sensitivity	102 dB @ 0.1 V
Weight	13g Net   232g Gross   Average weight will vary according to ear size
Build Material	40 Shore Medical Grade Silicone
Mould Type	Canal Mould
Standard Colour	Clear
Included Accessories	Instruction Leaflet, Wax Pick, Comfort Cream, Carry Pouch, Flight Case
Optional Accessories	Extension Cable
Package Dimensions	147mm x 50mm x 100mm
Warranty Period	1 Year against manufacturing and component failure

## Build options

Cable Exit (Top Default)	Top exit for cable run over the ear or bottom exit for front cable drop
Colour (Clear Default) - SRP £10	The T3 can be produced in any colour from our current colour chart
Laser Etching (None Default) - £10	The T3 includes laser etching up to 10 characters
Cable Choice (Translucent Default)	The T3 may be produced with any cable from our current range

# T3 Single Driver In-Ear Monitor

## Image Library



T3-1.jpg



T3-2.jpg



T3-3.jpg



T3-4.jpg



T3-5.jpg



T3-6.jpg




T3-7.jpg



T3-8.jpg



T3-9.jpg

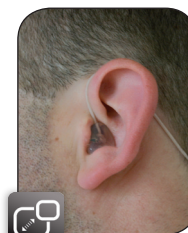

T3-10.jpg



T LogoWhite.jpg



T LogoBlack.jpg